

# LUXOL WB LUSTRE



#### **Product Description**

Luxol Lustre is a water-based interior wall paint designed to give walls premium look with durability. It is specially formulated to provide rich lustre finish. Luxol Lustre can be applied as 'dana finish' or smooth finish.

### Product Attributes

#### **Recommended Use**

Plastered surfaces, concrete walls, fibre board, asbestos, gypsum board and false ceilings.

# Finish Dana / Smooth

#### Coverage



- i. 50 70 sq.ft/lt/2 coats, for dana finish
- ii. 100 120 sq.ft/lt/2 coats, for normal smooth finish

#### Drying Time at 60% RH, 25° C



**SD:** 15-25 min depending on weather conditions

HD: 6-8 hours



#### **Flash Point**



Water- based paint, hence non-flammable

#### Gloss / Sheen Level



40-70 at 85° GH

# Green Pro Certified Validates our effort in striving towards cleaner, more sustainable future

#### **Dilution Ratio**



- Dana finish: No dilution required
- Smooth finish:Dilute 25-30% depending on the shade

#### **Application Method**



Brush, Honeycomb Roller & Felt Roller



**Packs** 

10 Ltr

Stability of Used Paint
Use within 24 hours

OUR LEWISH

20 I tr

# LUXOL WB LUSTRE



#### **Surface Preparation**



Remove all dirt, loose paint, flakes using wire mesh.



Cover fine cracks with putty, large cracks may need cement work.



#### **Priming**



For best result, apply one coat of Breathe Easy Primer as per recommended dilution and allow it to dry for 6 -8 hours. Alternately, Seal-O-Prime or BP Cement Primer WTcan also be used.

## DIRECTIONS FOR APPLICATION Topcoat -

- **Dana finish** Thoroughly mix the paint and then take brushful of material and apply generously on the wall. Allow 5-10 min for the paint to set in (depending on ambient temperature, humidity, surface preparation and wall porosity) and then apply honeycomb roller to develop large dana finish.
- Use cloth roller for small dana. Do not overdo the application, else the beads so generated may subside. Allow the coat to dry for at least 6-8 hours and then apply second coat in similar fashion.

#### Do not dilute before application.


• **Smooth finish** - Mix the paint thoroughly before use. Dilute as recommended and apply with brush/roller. Allow 4-6 hours to dry (depending on RH, temperature and surface conditions) and apply a second coat. Allow it to dry.

#### **Points to Note**

- ▶ Dana finish is obtained when properly applied with honeycomb roller
- ► Minimum two coats are required in this case
- ► Applicator is key to development of dana finish

#### **Precautions**

- Stir well and strain before use.
- Do not apply when ambient temperature is less than 10°C or if the temperature might drop to this level within 4 hours of application.
- · Do not over-thin. Do not over-extend the brush.

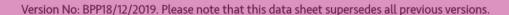

#### **BERGER PAINTS INDIA LIMITED**